USER'S GUIDE

ELECTRONIC TYPEWRITER

AX-250

brother®

AMERICAN

CONGRATULATIONS!

Thank you for choosing a Brother electronic typewriter! This product is designed to deliver years of reliable operation.


Please make sure that the following items are included with your typewriter

- cassette ribbon
- cassette daisy wheel
- correction tape

Please write the model number and the serial number of this typewriter in the blank spaces below. These numbers can be found on the rear panel of the typewriter. Please keep these numbers for future reference.

MODEL NO.:_____ SERIAL NO.:_____

The power cord compartment is in the rear of the typewriter. The power cord should be neatly fitted back in its compartment before transportation. The power switch is located on the left side of the typewriter near the rear.

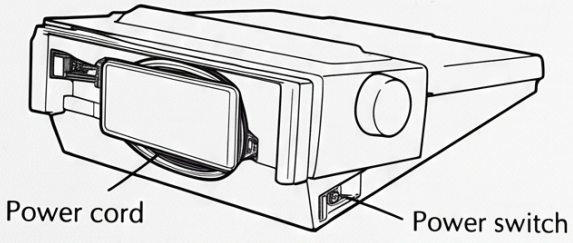

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CONTENTS

Keyboard 2

Description 4

Basic typing 5
Selecting pitch 5
Selecting line spacing 5
Setting margins 5
Uppercase characters and repeated characters 6
Hot zone 6
Returning the carrier 7
Backspacing 8

Memory correction 9
Correcting one character 9
Relocation 9
Word out 9
Line out 10

Manual correction 11
Correcting one character 11

Insertions & deletions 12
Insertions 12
Deletions 13

Other functions 14
Tabs 14
Centering 15
Right margin flush 16
Automatic underlining 16
Boldface 17
Index/reverse index 18
Superimposing characters 19
Superscript/subscript 19
Extra character set 19

Replacing the ribbon, etc. 20
Replacing the cassette ribbon 20
Replacing the correction tape 21
Replacing the cassette daisy wheel 22

Care & troubleshooting 23
Care of the unit 23
Troubleshooting 23

Specifications & starter kit 24
Specifications 24
Starter kit (SK-100) 24


Alphabetic index 25

Quick reference 27

Compatible accessories

Accessory order form

KEYBOARD

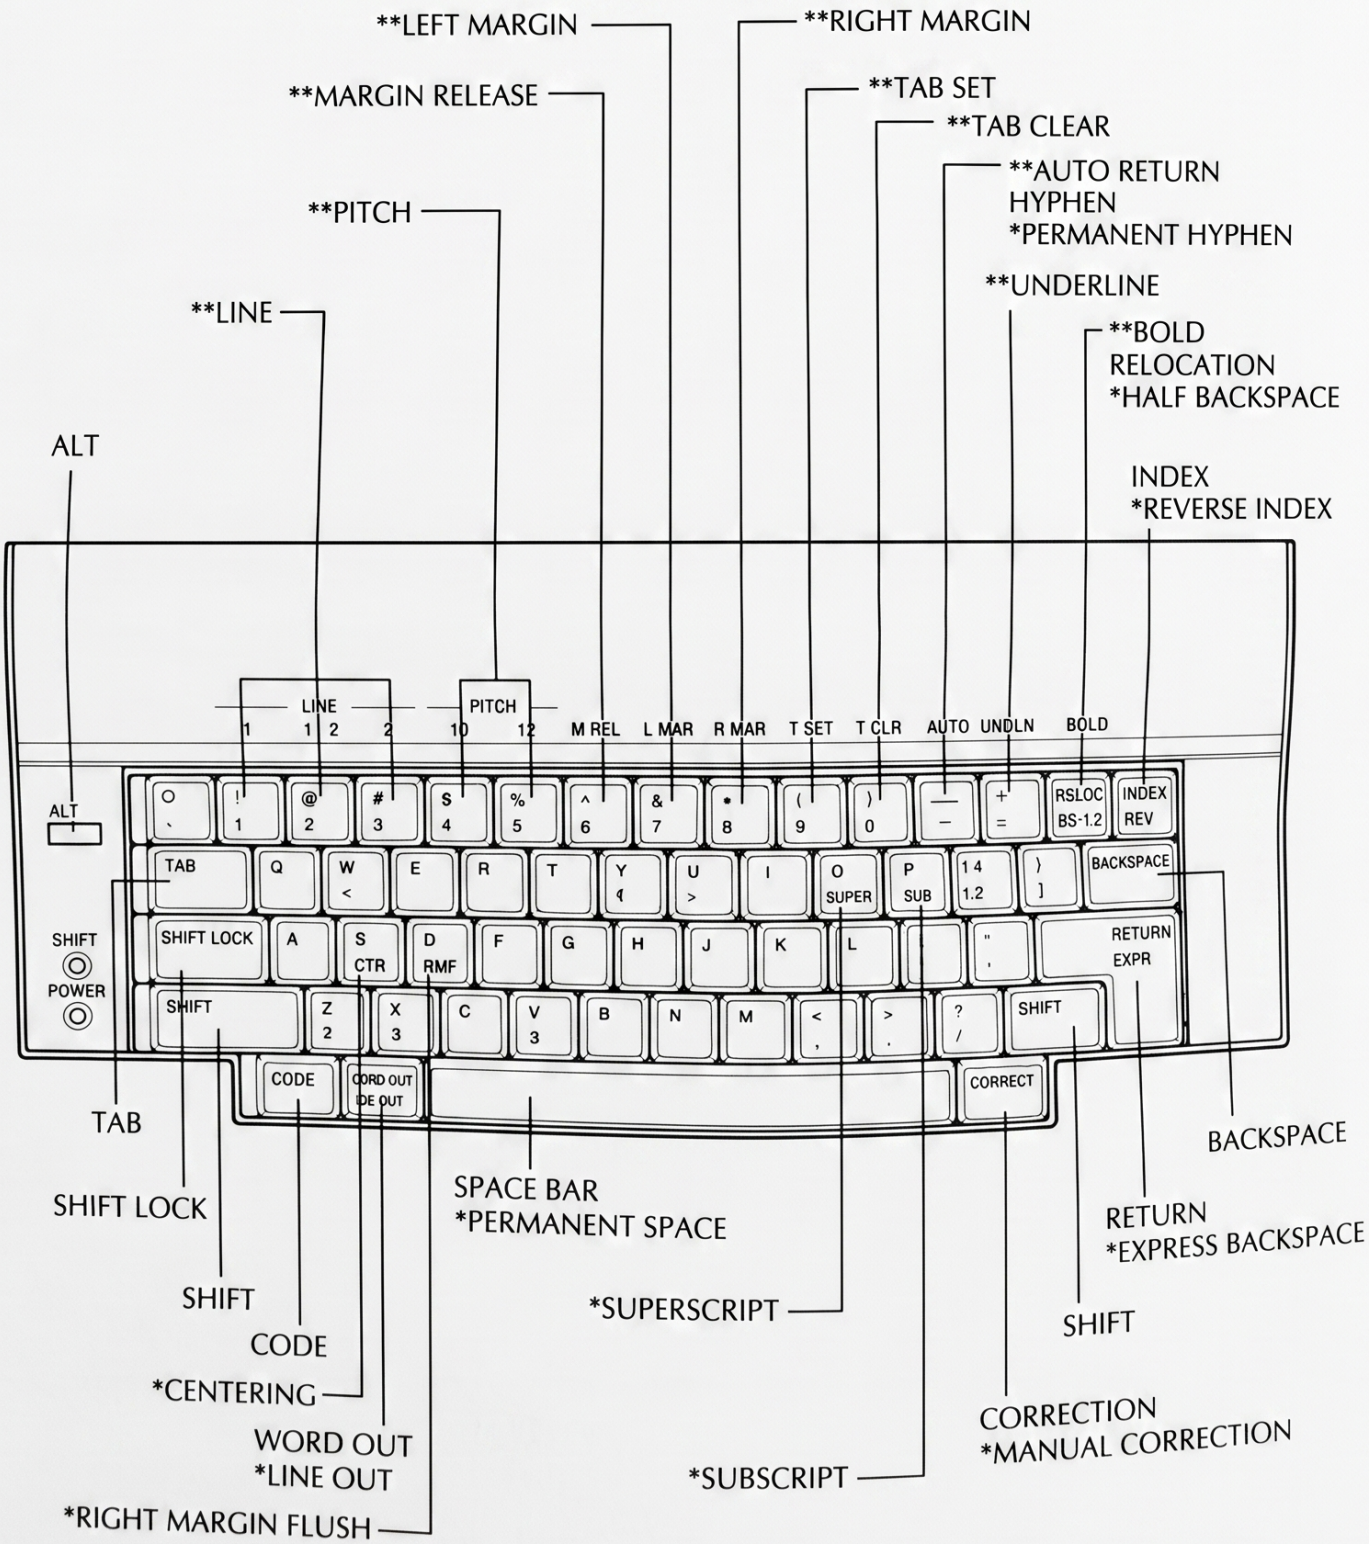

**LEFT MARGIN
**RIGHT MARGIN
**MARGIN RELEASE
**TAB SET
**TAB CLEAR
**AUTO RETURN
HYPHEN
*PERMANENT HYPHEN
**PITCH
**UNDERLINE
**LINE
**BOLD
RELOCATION
*HALF BACKSPACE
ALT
INDEX
*REVERSE INDEX
LINE
PITCH
M REL
L MAR
R MAR
T SET
T CLR
AUTO
UNDLN
BOLD
ALT
TAB
Q
W
E
R
T
Y
U
I
O
SUPER
P
SUB
RSLOC
BS-1.2
INDEX
REV
BACKSPACE
SHIFT
POWER
SHIFT LOCK
A
S
CTR
D
RMF
F
G
H
J
K
L
RETURN
EXPR
SHIFT
Z
X
C
V
B
N
M
SHIFT
CODE
CORD OUT
DE OUT
CORRECT
TAB
SHIFT LOCK
SHIFT
CODE
*CENTERING
WORD OUT
*LINE OUT
*RIGHT MARGIN FLUSH
SPACE BAR
*PERMANENT SPACE
*SUPERSCRIPT
*SUBSCRIPT
CORRECTION
*MANUAL CORRECTION
SHIFT
RETURN
*EXPRESS BACKSPACE
BACKSPACE

- (*) Hold down the **CODE** key and press the appropriate key to activate these functions.
- (**) Hold down the **ALT** key and press the appropriate key to activate these functions.
- Whenever the **CODE** or **ALT** key is used to activate a function, the following terminology is used: **CODE** + APPROPRIATE KEY or **ALT** + APPROPRIATE KEY. The **CODE** or **ALT** key must be held down while the APPROPRIATE KEY is pressed.
- The following functions and characters can be repeated by holding down the corresponding keys:

  NORMAL CHARACTERS
  HYPHEN
  SPACE BAR
  BACKSPACE
  RETURN
  TAB (carrier moves from one tab to the next)
  CORRECTION
  INDEX/REVERSE INDEX.




DESCRIPTION

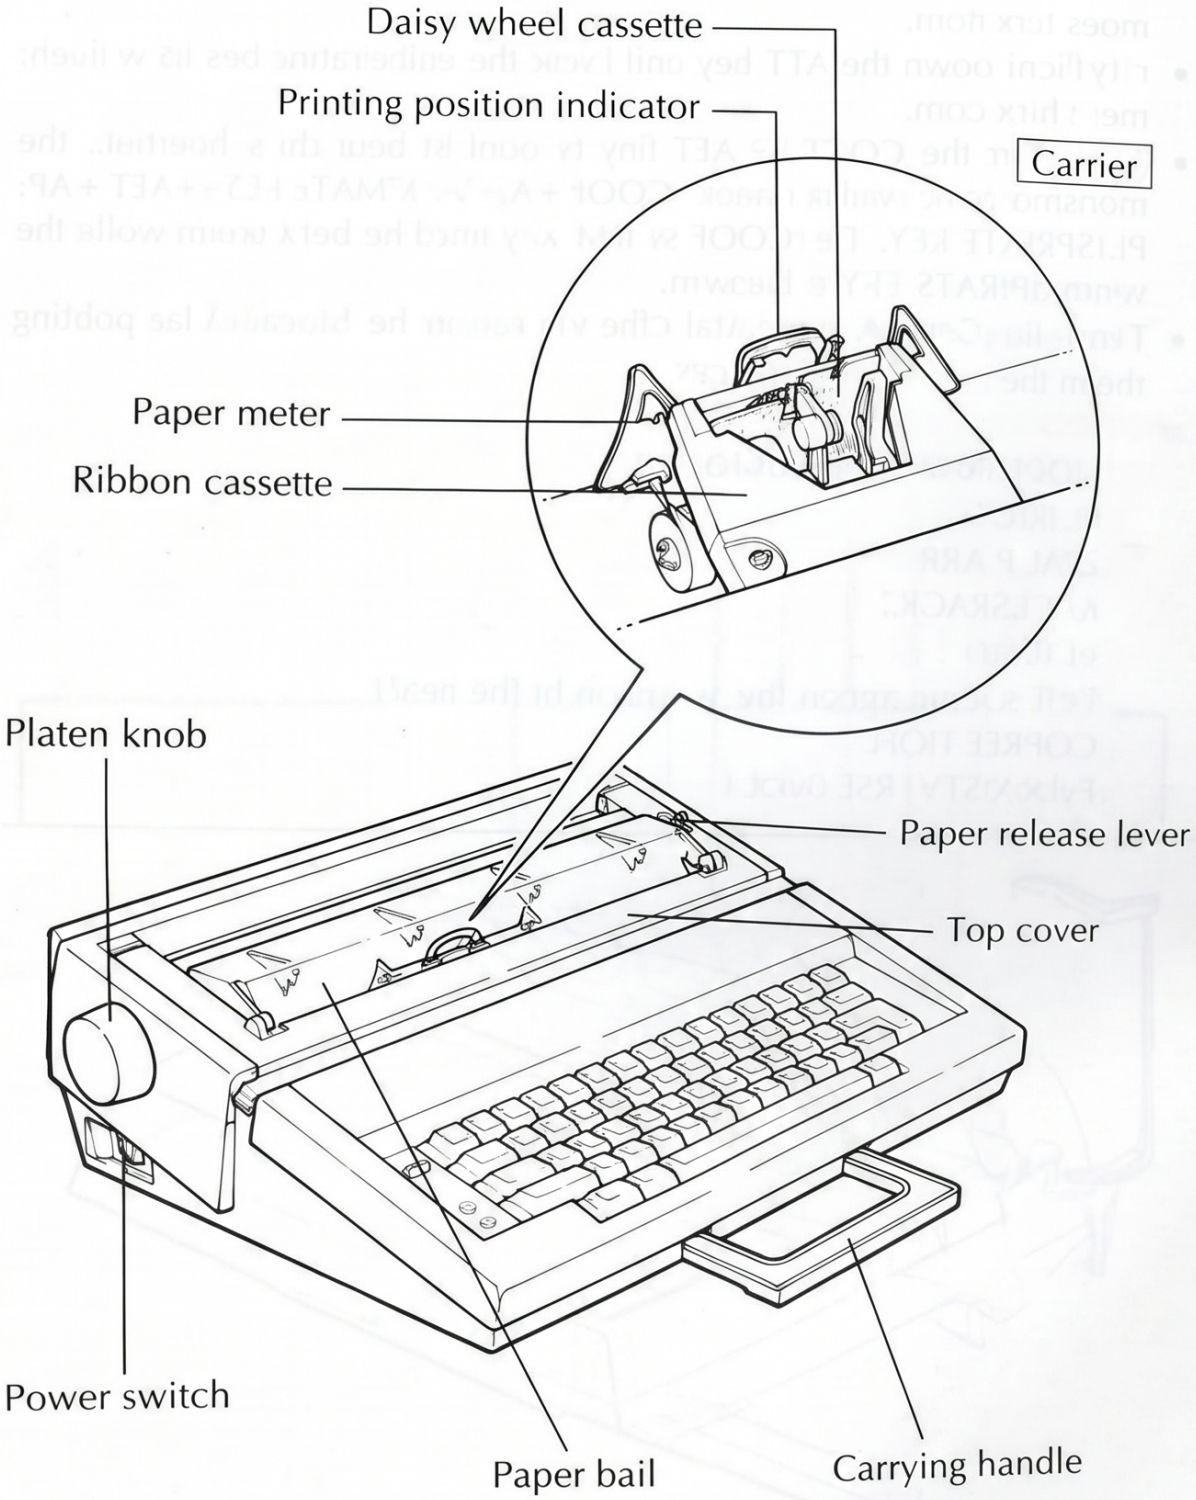

- **Paper release lever:** Pushing this lever loosens tension on the paper so that it can be adjusted as necessary.


BASIC TYPING

Selecting pitch

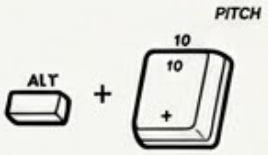

Your typewriter offers two typing pitches:

Pica (10 pitch): 10 characters per inch

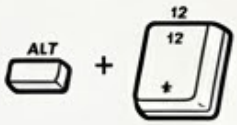


Elite (12 pitch): 12 characters per inch


Press **ALT + PITCH 10** (Number "4" key) for Pica, or **ALT + PITCH 12** (Number "5" key) for Elite.

Note : You cannot change the pitch selection in the middle of the line.


Selecting line spacing

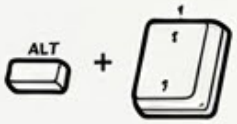

You have a choice of single space, 1 1/2 space and double space.

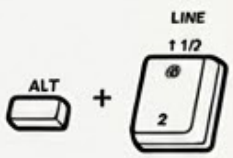

Press **ALT + LINE 1** (Number "1" key) for single space, **ALT + LINE 1 1/2** (Number "2" key) for 1 1/2 space, or **ALT + LINE 2** (Number "3" key) for double space.

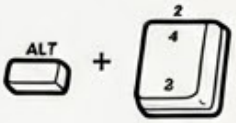


Setting margins



You may freely adjust the right left margins. The minimum distance between the left and right margins is two (2) inches, i.e. either 20 (Pica pitch) or 24 characters (Elite pitch).


Left margin

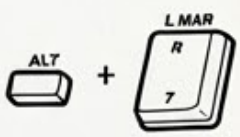

1) Move the carrier to the desired position using the **SPACE** bar or the **BACK-SPACE** key. To move beyond the current left margin, first baspace to the left margin, then press **ALT + MARGIN RELEASE** (Number "6" key).
2) Press the **ALT + LEFT MARGIN** (Number "7" key) to set the left margin.

Typing to the left of the left margin,, the **SPACE** move the carrier to the conrent bar to the words. the key.
Press the **ALT + LEFT MARGIN** (Number "7" key).


Right margin

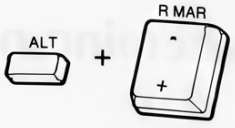

1) Move the carrier to the desired position using the **SPACE** bar or the **BACK-SPACE** key. To move beyond the current right margin, first move to the right margin, then press **ALT + MARGIN RELEASE** (Number "6" key).
2) Press **ALT + RIGHT MARGIN** (Number "8" key) to set the right margin.

Note : If you want to set the right margin to the right of the current right margin, please turn off the auto carriage return function.

Uppercase characters and repeated characters

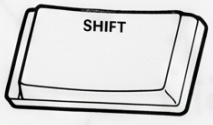

To type uppercase characters, hold down either the right or left **SHIFT** key (the SHIFT lamp will light while a **SHIFT** is held down). Releasing this key returns the keyboard to the lowercase mode.



For continuous uppercase typing, press the **SHIFT LOCK** key (the SHIFT lamp will light and all the keys will be set in uppercase mode). To return to lowercase typing, press either the right or left **SHIFT** key.

To type a character repeatedly, hold down the corresponding key for more than half a second.


Hot zone

The hot zone starts six (6) spaces before the right margin and extends to the right margin. A warning beep will sound when the hot zone is reached.

Returning the carrier


Returning the carrier to the left margin feeds the paper by the number of lines set with the **ALT + LINE 1** (Number "1" key), **1 1/2** (Number "2" key), **or 2** (Number "3" key) keys.

Manual return

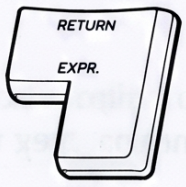

To return the carrier, simply press the **RETURN** key. Holding down this key will feed the paper repeatedly.

Automatic return

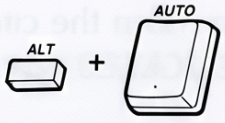

To activate the auto carrier return function, press **ALT + AUTO RETURN** (you will hear two beeps). The carrier will return automatically every time the **SPACE** bar or the **HYPHEN** key is pressed in the hot zone. To turn this function off, press the same **ALT + AUTO RETURN** again.

- **Permanent space:** If you want to type a space in the hot zone without triggering a carrier return, press **CODE + SPACE** bar.
- **Permanent hyphen:** If you want to type a hyphen in the hot zone without activating an auto carrier return, press **CODE + HYPHEN**.
- **Typing past the right margin:** If you want to type a few characters beyond the right margin, press **ALT + MARGIN RELEASE** (Number "6" key) when the carrier is on the right margin.

Backspacing


Your typewriter has three different backspace functions.

Simple backspace




To move back one space at a time, press the **BACKSPACE** key. To move continuously to the left, hold this key down.

Express backspace

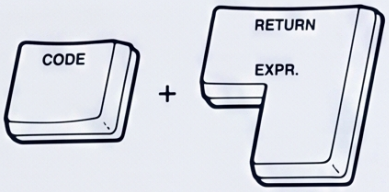

To move the carrier quickly to the left margin, press **CODE + EXPRESS BACKSPACE**.

Half backspace

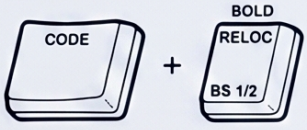

To move back half a space, press **CODE + HALF BACKSPACE**. The use of this function is explained in the Insertions & Deletions section on page 12.

- **Typing to the left of the left margin:** If you want to type a few characters to the left of the left margin, press **ALT + MARGIN RELEASE** (Number "6" key) when the carrier is on the left margin.

MEMORY CORRECTION

This typewriter has a one-line correction memory that makes it possible to delete or correct any character, word, or line within the current typing line by the touch of a single key.

Correcting one character



1) Use the **BACKSPACE** key or the **SPACE** bar to line up the carrier with the error.
2) Press the **CORRECTION** key. (The incorrect character will be eliminated.)
3) Type in the correct letter.


- To erase a series of characters, simply hold down the **CORRECTION** key. The carrier will backspace and correct continuously until you release the key.
- Super/subscripts, bold characters, and underlining can also be corrected using the **CORRECTION** key.

Relocation



The **RELOCATION** key allows you to space to the end of your typing line rapidly. Press the **RELOCATION** key to take the carrier back to the position it occupied before the correction.

Word out

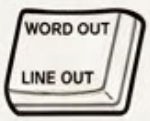

This function allows you to erase one word at a time.

1) Use the **BACKSPACE** key or the **SPACE** bar to move the carrier to the last character of the word to be deleted.

```
Most people feel
               △
```

(The small triangle mark [△] indicates the location of the carrier.)

2) Press **WORD OUT.** The word is erased and the carrier is now on the space previously occupied by the first character of the erased word.

```
Most people
           △
```

3) You can now continue typing your text.

```
Most people are no longer
```

- If the carrier is positioned in the middle of a word, only the letters from that position to the beginning of the word will be erased.
- This function erases superscripts/subscripts and bold characters if they are part of the word. **Underlining is not erased by this function.**
- To interrupt the word out function while a word is being erased, press the **CORRECTION** key.

Line out



This function allows you to delete an entire line at a time. Line Out will delete the last line you typed, as long as you haven't advanced to the next line.

1) Use the **BACKSPACE** key or the **SPACE** bar to move the carrier to the last character of the line to be erased.

```
mistakes on pages 25, 75, and 59.
     I would like to suggest some minor
                                       △
```

2) Press **CODE + LINE OUT** to delete the line automatically. The carrier will stop at the space previously occupied by the last character to be deleted.

```
mistakes on pages 25, 75, and 59.
△
```

- If the carrier is positioned in the middle of a word, correction will start from that position to the beginning of the line.
- Line deletion includes superscripts, subscripts, and bold characters. **Underlining is not crased by this function.**
- To interrupt the line out function while a line is being erased, press the **CORRECTION** key.

MANUAL CORRECTION

Manual correction is used for mistakes that are not located in the current typing line, or for mistakes that are in the current line but cannot be corrected using the memory correction functions.

Correcting one character

1) Press **INDEX** or **CODE + REVERSE INDEX** (see page 18) to return the paper to the same line as the character to be corrected.
2) Align the carrier with the error using **BACKSPACE** or the **SPACE** bar.

```
Thank you for your intesesting paper.
                    △◄──────────────△
```

3) Press **CODE + CORRECTION.** 

and retype wrong character
4) Type in the incorrect character to erase it. (Use the **SHIFT** key for uppercase characters.)

```
Thank you for your inte esting paper.
                       △
```

5) Type in the correct character.

```
Thank you for your interesting paper.
                       △
```

INSERTIONS & DELECTIONS

Insertions



Your typewriter features a half-backspace function that makes it easy to add letters to — or remove them from — a text you have already typed.

```
some chemical fomulas that most people
```

In the example above, the “r” of the word “formulas” has been omitted. This mistake can be corrected using the simple correction method explained in the previous section, but unless the entire line is deleted and then retyped, this creates a cluttered, unbalanced look. Therefore:


1) Delete the entire misspelled word.
2) Line the carrier up with the first letter of the deleted word.
3) Press **CODE + HALF BACKSPACE** to move the carrier half a space to the left.

```
some chemical          that most people
                  ⩚
```

4) Type in the correct word. Because of the half-backspace function, the corrected word is separated from the next word by a half-space instead of running into it.

```
some chemical formulas that most people
```

Deletions

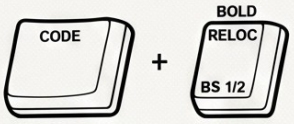


```
There are some minnor changes I would like
                ^
```

In the example above, there are too many "n's" in the word "minor". Therefore:

1) Delete the entire misspelled word.
2) Align the carrier with the second letter of the deleted word.

```
There are some          changes I would like
                ^
```

3) Press **CODE + HALF BACKSPACE.** 

4) Type in the correct word. Because of the half-backspace function, the corrected word is separated with one and a half spaces on each side.


```
There are some  minor changes I would like
```

OTHER FUNCTIONS

Tabs

Tabs are used to create tables.

Setting tabs

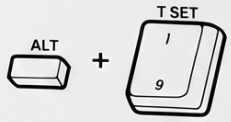

1) Move the carrier to the desired position using the **SPACE** bar or **BACKSPACE**.
2) Press the **ALT + TAB SET** (Number "9" key) to set the tab. A maximum of 12 tabs can be set.
3) Repeat steps 1 and 2 to set each tab.


- The right margin and the right end are considered tab positions.

Using tabs



1) Press the **TAB** key to space to the next tab.
2) Type the word(s).
3) Repeat steps 1 and 2 to complete a line of your table.
4) Press-**RETURN** to move to the beginning of the next line and repeat steps 1, 2, and 3 to complete the table.

Clearing tabs

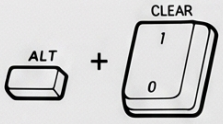

Caution: If you press* ALT + TAB CLEAR *(Number "0" key) for more than half a second, all tabs will be deleted. A beep will sound three times.

To clear a single tab:

1) Using the **TAB** key, move the carrier to the tab stop you want to clear.
2) Press **ALT + TAB CLEAR** (Number "0" key) to clear the tab.

Centering



Your Brother typewriter allows you to center a line automatically.


1) To center, move the carrier to the left margin and press **CODE + CENTERING** (Letter "S" key). The carrier will advance to a point halfway between both margins.
2) Type the text. The characters are not printed immediately. The carrier will backspace one half-space for each character typed.
3) To print the text, press **CODE + CENTERING** (Letter "S" key), **TAB**, or **RETURN.**

Left margin **Right margin**

```
        Institute of Chemistry and Physics
                  100 Metro Street
                   New York, N.Y.
```

- If you make a mistake, press **CORRECTION**, **WORD OUT**, or **CODE + LINE OUT**. Pressing any of these keys will erase the whole line and will return the carrier halfway between the margins.
- To cancel centering altogether, press one of those keys or **CODE + CENTERING** (Letter "S" key) without typing any text. The carrier will then return to the left margin.

Right margin flush



This typewriter can automatically print text flush (or even) with the right margin. This is particularly useful for dates and other headings.


1) Press **CODE + RIGHT MARGIN FLUSH** (Letter "D" key). The carrier will advance to the right margin.
2) Type the text. The characters will not be printed immediately. The carrier will backspace each time a character is entered.
3) To print the text, press **CODE + RIGHT MARGIN FLUSH** (Letter "D" key), **TAB**, or **RETURN.**

Right margin
↓

```
                                New York, January 17th, 1989
```

- If you make a mistake, press **CORRECTION, WORD OUT** or **CODE + LINE OUT.** The whole line will be cancelled and the carrier will return to the right margin.
- To cancel right margin flush altogether, press one of the above keys once again or **CODE + RIGHT MARGIN FLUSH** (Letter "D" key). The carrier will return to the left margin.

Automatic underlining

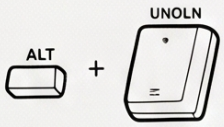


1) Press **ALT + UNDERLINE** to turn on the automatic underlining feature. You will hear two beeps.
2) Type your text. All characters and the spaces will be automatically underlined.
3) To cancel the automatic underlining feature, press **ALT + UNDERLINE** again.

```
Suggestion
```

- The spaces or hyphens that triggered a carrier return in the automatic carrier return mode are not underlined. So-called permanent spaces or hyphens, i.e. spaces or hyphens typed while holding down the **CODE** key, however, are underlined.
- This function can be used together with the automatic contering and the right margin flush functions.

Boldface

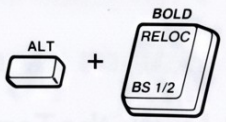

1) Press **ALT + BOLD** to boldface text. You will hear two **beeps**.

New York, N.Y.

2) Press **ALT + BOLD** again to cancel this mode.


- This function can be used together with the automatic centering and the right margin flush functions. However, you should set the bold mode on before entering the centering or right margin flush mode.
- If there is even only one bold character in the current line, the automatic correction function will assume all characters are bold and therefore, deleting will take more time.

Index/reverse index

This function allows you to move the carrier upwards or downwards by 1/12 inch (one half line).



Press the **INDEX** key to lower the carrier by 1/12 inch.



Press **CODE + REVERSE INDEX** to raise the carrier by 1/12 inch.

To move the carrier continuously in either direction, hold down the appropriate key(s) for more than half a second.

- Using the **INDEX** or **CODE + REVERSE INDEX** keys disables the automatic correction capability.

Superimposing characters





Some characters not found on your keyboard can be created as follows. For example, if you want the symbol for Japanese yen:

1) Type the letter "Y".
2) Press **BACKSPACE**.
3) Type the symbol "=".
4) You then have the symbol "¥".

- To erase superimposed characters, you may use the automatic correction function for the second character but you have to use the manual method for the first character.

Superscript/subscript





Superscripts and subscripts are used mainly for scientific text composition (for instance, exponents, chemical symbols, or reference to footnotes).

To print a superscript, press **CODE + SUPERSCRIPT** (Letter "O" key) to raise the carrier by 1/12 inch, and then type the character that you want in superscript.


$e=mc^2$

To print a subscript, press **CODE + SUBSCRIPT** (Letter "P" key) to lower the carrier by 1/12 inch, and then type the character that you want in subscript.

$C_{20}H_{42}$

- **In super/subscript mode, the carrier will always move by 1/12 inch, regardless of the current line spacing.**
- **Super/subscripts of more than 1/12 inch are not possible.**

Extra character set



+ Green


To type the special characters and symbols marked in green on the bottom of certain keys, hold down **CODE** and press the desired key.

REPLACING THE RIBBON, ETC.

Opening the top cover automatically shuts off the power. The carrier stays where it is.


Replacing the cassette ribbon


Two types of ribbons are available: correctable film ribbon Brother model 1030 or 1230 and nylon ribbon model 1032.

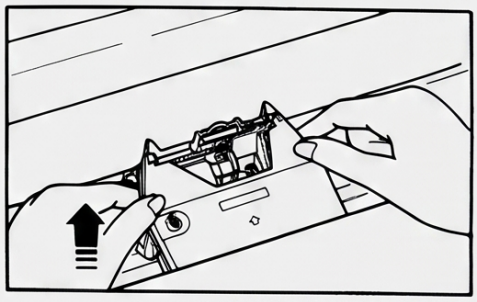


To replace the cassette ribbon

1) Move the carrier to the center of the platen.
2) Open the top cover.
3) Holding the cassette with both hands, lift the front of the cassette up and out.
4) Move the cassette towards the platen to remove it.
5) Turn the feed knob (on the left side of the cassette) counter-clockwise to tighten the ribbon in the new cassette.
6) Aligning the arrow on the cassette with the arrow on the cassette holder, use both hands to ease the cassette into the holder, back first.
7) Gently press down on the front of the cassette until it clicks into place.
8) Again turn the feed knob counter-clockwise to take up any slack.
9) Close the cover.

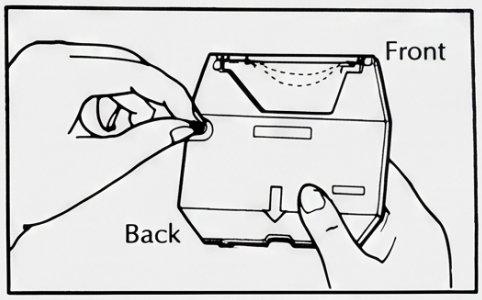

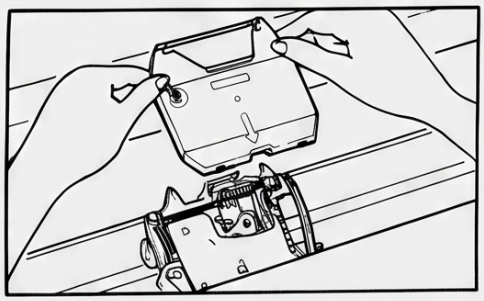

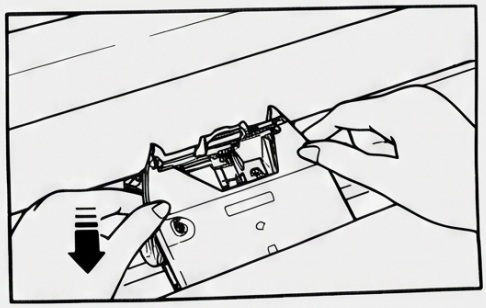


- The amount of tape remaining can be checked through the viewing hole on the right side of the cassette.

- Make sure to use only Brother-authorized cassette ribbons, correction tapes and cassette daisy wheels. Brother cannot be held responsible for difficulties caused by the use of unauthorized supplies.

Replacing the correction tape


Two types of correction tape are available:


- Liff-off correction tape, to be used with correctable film ribbon.
- Cover-up correction tape, to be used with nylon ribbon.

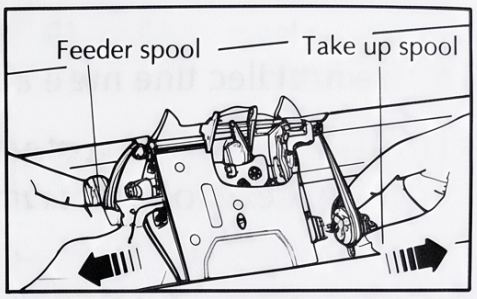


To replace the correction tape

1) Move the carrier to the center of the platen.
2) Open the top cover.
3) Remove the cassette ribbon, if installed.
4) Pull off both spools, pressing against the correction tape with your thumbs. Bring it back to a position parallel with the platen, and lift it up and out.
5) Pass the new tape through the left guide, behind the ribbon guide, and out through the right guide. The rough (sticky) side of the tape should face the platen.
6) Attach the feeder spool to the pin on the left.
7) Attach the take-up spool to the pin on the right.
8) Turn the take-up spool counter-clockwise until a small amount of white tape has wound around it.
9) Replace the cassette ribbon and close the cover.

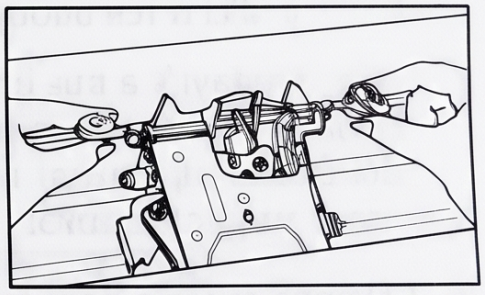


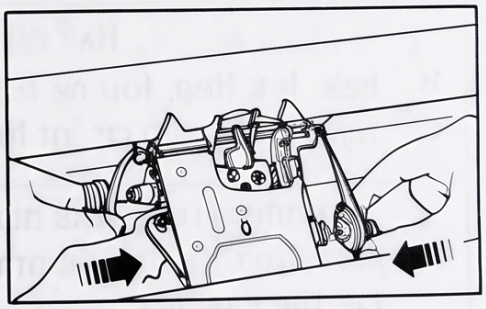

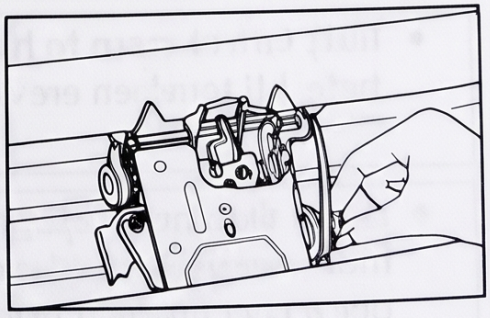


Replacing the cassette daisy wheel


The daisy wheel is housed in a clear plastic cassette for easy, damage-free handling and quick typeface changes.

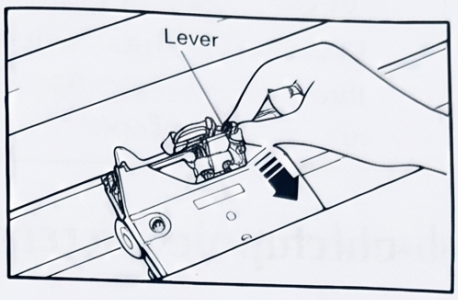


To replace the cassette daisy wheel

1) Open the top cover.
2) Pull the lever towards you to release the daisy wheel lock.
3) Remove the cassette daisy wheel by pulling it out of the machine by the protruding "ear" on the top right.
4) Insert the desired cassette daisy wheel into the slot and press down gently.
5) Slide the lever back to its original position to lock the cassette daisy wheel in place. Make sure to press the lever firmly until a clicking sound is heard.
6) Close the cover.

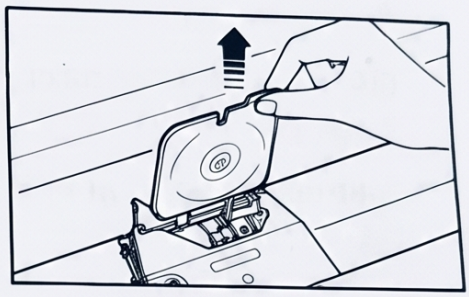

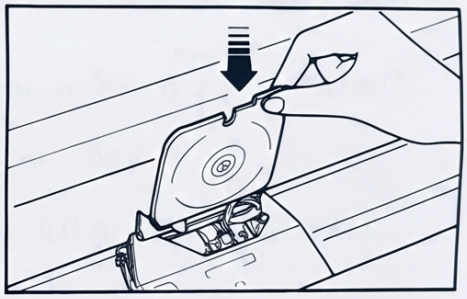

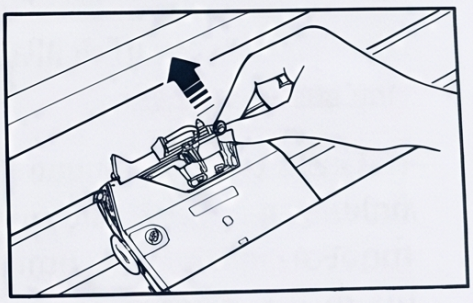

- Make sure the cassette daisy wheel is not inserted backwards. The "ear" should always be on the upper right.

- If the cassette daisy wheel is not inserted properly, characters will not be printed correctly.

- It is not necessary to remove the cassette ribbon when replacing the daisy wheel.

- As soon as you close the cover, the carrier moves to the extreme left, and then returns to the position it was in when the cover was lifted.

CARE & TROUBLESHOOTING

Care of the unit

Beware of tiny objects: Take precautions to prevent anything from slipping into the typewriter or between the keys. Be especially careful of metal objects such as paper clips and staples.

Cleaning: Never use volatile liquids such as thinner or benzine to clean the exterior surface of the typewriter. Use only a soft cloth dampened with a mild detergent solution.

Location: Do not expose your typewriter to direct sunlight, heat or intense vibration. Be sure to replace the keyboard cover when the typewriter is not in use.

Ventilation: Do not block the ventilation slits provided at the back of the unit to prevent overheating.

Troubleshooting

Problem	Possible cause
Nothing happens when power switch is turned on	1. Is the power cord plugged in? 2. Is the top cover closed?
Poor printing performance	1. Is the daisy wheel properly installed? (Has the lever been pressed firmly?) 2. Have you run out of ribbon?
Poor correction performance	1. Has the correction tape been properly installed? 2. Have you run out of correction tape? 3. Are you using the proper correction tape?

SPECIFICATIONS & STARTER KIT

Specifications

Paper capacity	12.0" (304.8mm)
Typing capacity	9.0" (228.6mm)
Typing speed	12 characters per second
Typing pitches	10, 12
Number of character keys	46
Line spacing	1, 1 1/2, 2
Tab set	12 tabs
Copies	Original + 4 copies
Ribbons	1030 Correctable Film Ribbon
	1032 Nylon Ribbon
Correction tapes	3010 Lift-off correction tape for use with correctable film ribbon
	4010 cover-up correction tape for use with nylon ribbon
Dimensions	16.2" × 5.3" × 14.4" (411 × 134 × 366mm)
Weight	9.9lb (4.5kg)

Starter kit (SK-100)

This starter kit provides you with a good supply of ribbons, a script daisy wheel and an extra correction tape at a great savings.

This includes:

- 3 correctable film ribbons
- 1 script 1012 daisy wheel
- 1 lift-off correction tape



ALPHABETIC INDEX

Backspacing
express, 8
half, 8
simple, 8

Bold
in centering or right margin flush, 17
setting & cancelling, 17

Cassette daisy wheel
available types, 24
replacing, 22

Cassette ribbon
available types, 24
replacing, 20

Centering
bold, 17
cancelling, 15
setting, 15

Correction
carrier relocation, 9
deleting characters (manual), 13
inserting characters (manual), 12
manual, 11
memory, 9
one character (memory), 9
one line (memory), 10
one word (memory), 9
restriction on memory correction, 10, 18

Correction tape
available types, 24
replacing, 21

Extra characters, 19

Hot zone, 6

Line spacing
1 1/2 space, 5
double space, 5
selecting, 5
single space, 5

Margins
left margin, 5
moving past, 5
right margin, 6
setting, 5
typing outside, 7, 8

Moving the paper, 18

Permanent hyphen, 7

Permanent space, 7

Pitch
elite, 5
pica, 5
selecting, 5

Repeated characters, 6

Returning the carrier
automatic, 7
manual, 7

Right margin flush
bold, 17
cancelling, 16
setting, 16

Subscripts, 19

Superimposed characters
creating, 18
erasing, 18











Superscripts, 19



Tabs
clearing, 14
setting, 14
using, 14






Underlining
correction, 9, 10
erasing, 9, 10
setting & cancelling, 16

Uppercase characters, 6

QUICK REFERENCE

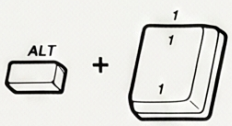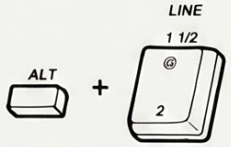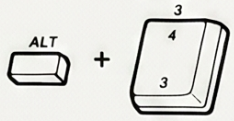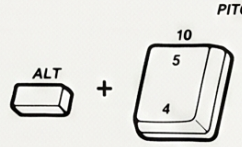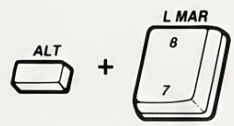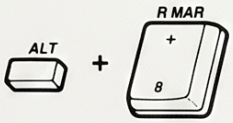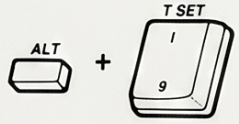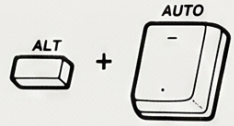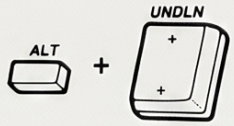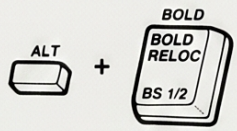		Page
	selects single line spacing	5
	selects 1 1/2 line spacing	5
	selects double line spacing	5
	selects Pica pitch	5
	selects Elite pitch	5
	allows moving past margins	5
	sets left margin position	5
	sets right margin position	6
	sets a tab	14
	removes a tab	15
	turns carrier auto return on/off	7
	turns auto underlining on/off	16
	turns bold on/off	17

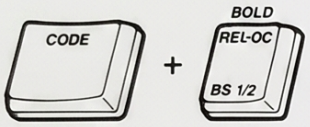		Page
	turns centering on/off	15
	turns right margin flush on/off	16
	turns superscript on	19
	turns subscript on	19
	moves carrier to end of line	9
	moves carrier back 1/2 space	8
	moves paper up	18
	moves paper down	18
	moves to next tab	14
	moves carrier back one space	8
	locks keyboard to uppercase	6
	sets keyboard to uppercase	6
	moves carrier to beginning of next line	7

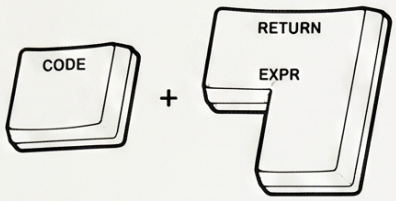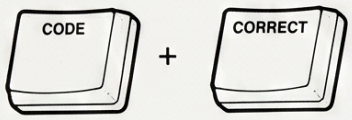		Page
	moves carrier to beginning of current line	8
	erases word in current line	9
	erases current line	10
	erases character in current line	9
	for manual correction	11

COMPATIBLE ACCESSORIES

Starter kit

Item No.	
SK-100	3 Correctable Film Ribbons 1 Script 1012 Daisy Wheel 1 Lift-off Correction Tape

Cassette ribbons/correction tapes

Item No.	
1030	Correctable Film Ribbon
1230	Correctable Film Ribbon (2 pack)
1032	Nylon Ribbon
3010	Lift-Off Correction Tape (2 pcs.) to be used with 1030, 1230 Ribbon
4010	Cover-up Correction Tape (2 pcs.) to be used with 1032 Ribbon

Cassette daisy wheels

Item No.		Type Pitch
M401	Pica 10 (Standard Pica)	10
M402	Prestige 1012	10, 12
M403	Elite 12 (Standard Elite)	12
M405	Script 1012	10, 12
M409	Grande 10	10
M409	Quadro 1012	10,12
M411	Brougham 10	10
M412	Brougham 12	12
M414	Prestige Italic 1012	10, 12
M415	OCR-B 10	10
M416	OCR-A 10	10
M417	Letter Gothic 12	12
M419	Super Grande 10	10
M421	Legal Prestige 1012	10, 12
M422	Super Grande II	10

Keep this page intact for future reference.
For additional accessories, please consult the accessory order form included in this manual.

ACCESSORY ORDER FORM

Dear Customer,
Please use this order form when ordering accessories for your typewriter. Please add $3.00 for shipping and handling charges. For orders to be shipped outside of the Continental U.S., please and $10.00 for shipping and handling.

Starter kit

Item No.		Price	Quantity	Total
SK-100	3 Correctable Film Ribbons 1 Script 1012 Daisy Wheel 1 Lift-off Correction Tape	$41.95		

Cassette ribbons/correction tapes

Item No.		Price	Quantity	Total
1030	Correctable Film Ribbon	$6.50		
1230	Correctable Film Ribbon (2 pack)	$11.50		
1032	Nylon Ribbon	$7.50		
3010	Lift-Off Correction Tape (2 pcs.) to be used with 1030, 1230 Ribbon	$6.50		
4010	Cover-up Correction Tape (2 pcs.) to be used with 1032 Ribbon	$10.50		

Cassette daisy wheels

Item No.		Type Pitch	Price	Quantity	Total
M401	Pica 10 (Standard Ptcs)	10	$26.50		
M402	Prestige 1012	10, 12	$26.50		
M403	Elite 12 (Standard Elite)	12	$26.50		
M405	Script 1012	10, 12	$26.50		
M408	Grande 10	10	$26.50		
M409	Quadro 1012	10,12	$26.50		
M411	Brougham 10	10	$26.50		
M412	Brougham 12	12	$26.50		
M414	Prestige Italic 1012	10, 12	$26.50		
M415	OCR-B 10	10	$26.50		
M416	OCR-A 10	10	$26.50		
M417	Letter Gothic 12	12	$26.50		

* Above pricing subject to change without notice.
For further information on these accessory items, call 901-973-6256.

SHIPPING LABEL

Brother International Corporation
Typewriter Division
P.O. Box 1332
Bartlett, TN 38184-1332

NAME _____

ADDRESS _____

CITY, STATE, ZIP _____

Sub Total

CA, GA, IL, NJ, NY, LA, SC, VA, TX, TN, NC, NM and MA residents add applicable sales tax _____

Total _____

Add $3.00 for shipping and handling

Method of payment (check one)

[ ] Check or Money Order enclosed

Please charge my [ ] Master card [ ] Visa.

Account Number

Expiration Date _____

Signature _____

List of Factory Authorized Service Depots:

In case of a problem with your Brother machine please contact the Service Depot in your area listed below:

GROGAN'S BUSINESS MACHINES
141 SAMOSET AVENUE
QUINCY, MA 02069
(417) 479-4747

LESTER ZISSERMAN OFFICE MACHINES
70 JAMESWAY
SOUTHAMPTON, PA 18966
(255) 357-4467

ADDER & TYPEWRITER EXCHANGE
133 SOUTH BROADWAY
BATTIMORE, MD 21231
(301) 332-1717

NORTH'S OFFICE MACHINES
2101 5 STREET N.W.
WASHINGTON, DC 30037
(203) 466-2000

BUCKHEAD OFFICE MACHINES
3164 PEACHTREE ROAD N.E.
ARLANTA, CA 30305
(404) 237-0400

ALABAMA TYPEWRITER
2203 6TH AVENUE SOUTH
BIRMINGHAM, AL 35333
(403) 322-8891

ACCORD OFFICE MACHINES
2203 IN MILWAUKEE AVENUE
CHICAGO, IL 60641
(112) 777-8744

MTC OFFICE MACHINE CO.
1540 USAON STREET
SAN FRANCISCO, CA 94123
(415) 775-9350

LEWAN & ASSOCIATES
6300 EAST TRANS
DENVER, CO 80222
(305) 759-9935

A-1 IDEAL BUSINESS MACHINES
3672 CORAL WAY
MIAMI, FL 33145
(305) 488-4887

I & | SERVICE & SUPPLY
9662 MOCKINGBIRD DRIVE
OMAHA, NE 68127-2047
(402) 333-3316

NASHVILLE BUSINESS EQUIPMENT
1814 CHURCH STREET
MASHVILLE, TN 37203
(635) 339-2911

FACTORY ELECTRONICS
2423 PALUMBO DRIVE
LEXINGTON, KY 40509
(606) 269-7341

CHARLOTTE PORTABLE TYPEWRITERS
814 CENTRAL AVENUE
P.O. BOX 80634
CHARLOTTE, NC 28204
(704) 375-4922

GITTINS TYPEWRITER
2223 CHICAGO AVENUE
MINNEAPOLIS, MN 55407
(612) 822-8227

MOBILE OFFICE MACHINES
2223 SOUTH BRENTWOOD BLVD.
ST. LOUIS. MO 63144
(314) 968-4322

BELL/GENERAL OFFICE EQUIPMENT
9778 WEST BTTH "SANTE FE DRIVE"
OVERLAND PARK, KS 66212
(915) 341-7772

APD BUSINESS BUSINESSS
3514 ADAMS AVENUE
SAN DIEGO, CA 92116
(619) 282-8226

ARKANSAS OFFICE EQUIPMENT
1900 JENNY LIND
FORT SMITH, AR 73201
(501) 782-4812

ABM OFFICE OUTFITTERS
ABM STAPLES MILL ROAD
RICHMOND, VA 23228
(604) 266-4468

CRAIG'S OFFICE MACHINES
555-S. WYOMING AVENUE
ALRUQUERQUE, NM 87123
(505) 262-2958

ARLINGTON BUSINESS EQUIPMENT
5837 COMMERCE STREET
JACKSONVILLE, FL 32211
(904) 743-3252

STAR OFFICE MACHINES
11333 SANTA MONICA BLVD
LOS ANGELES, CA 90025
(213) 477-6091

CONNELL'S OFFICE EQUIPMENT, INC.
708 S. 38TH
TACOMA, WA 98408
(200) 472-4645

TAC INC. OFFICE PRODUCTS
2605 EAST FLAMINGO
LAS VEGAS, NY 99121
(702) 737-1949

MECHAM'S TYPEWRITER REPAIR
1753 SOUTH 7TH EAST
SALT LAKE CITY, UT 84105
(801) 466-1609

A & B REACON BUSINESS MACHINES
25-25 BORDEN AVENUE
LONG ISLAND CITY, NY 11101
(718) 786-6000

CLEVELAND TYPEWRITER & COMPUTER
1955 LEE ROAD
CLEVELAND, NH 44118
(216) 371-2500

DOSSMAN'S OFFICE MACHINES
4119 MT. NEW DRIVE
ANCHUANCE, AR 99504
(907) 274-3515

MAHR BUSINESS EQUIPMENT
2746 WEST CAMELBACK ROAD
METAIRIE, AZ 84017
(602) 242-4035

MODERN BUSINESS MACHINES
4609 FAIRFIELD STREET
METAIRIE, LA 70006
(504) 885-8961

NEVILL BUSINESS MACHINE COMPANY
2707 ROYAL LANE
DALLAS, TX 76229
(214) 543-3285

REM HAWAII OFFICE PRODUCTS
645 HALEKAUWILA STREET
HONOLULU, HI 96813
(803) 537-9975

RICHARD'S BUSINESS MACHINES
10509 AURORA AVENUE NORTH
SEATTLE, WA 98133
(206) 362-7078

ROBBINS BUSINESS MACHINES
3069 FORT STREET
LINCOLN PARK, MI 48146
(313) 388-5000

OMNI TECHNICAL SERVICES
23182 ALCALDE DRIVE
SUITE G
LAGUNA HILLS, CA 92653
(714) 766-6627